


LED Fans FT2

center ring replacement


For easy installation, orient the fan with the screw side facing upwards and the arc resting against your hips.

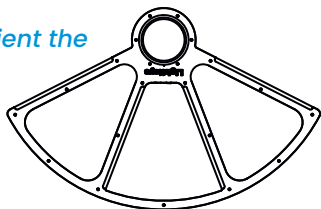

1. Ring removal

①

put both hands inside the ring and grip it firmly

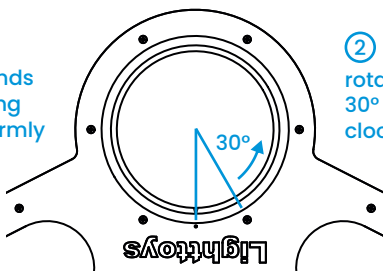

②

rotate the ring 30° counter-clockwise


③

pull the ring upwards

2. Ring insertion

①

Position the ring as shown

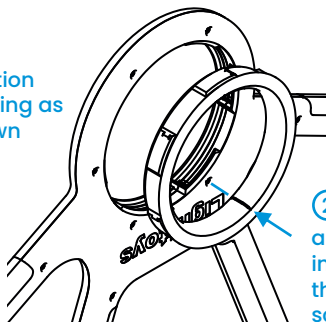

③


push the ring fully in

②

align the ring's inner seam with the bottom-right screw

④

put both hands inside the ring and grip it firmly

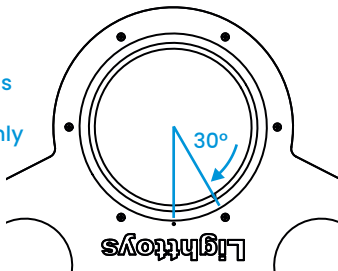

⑤

rotate the ring 30° clockwise until it clicks

(seam should align with the dot)